
Practical 10

<u>AIM:- b)</u> Design and configure an internetwork using wireless router, DHCP server and internet cloud.

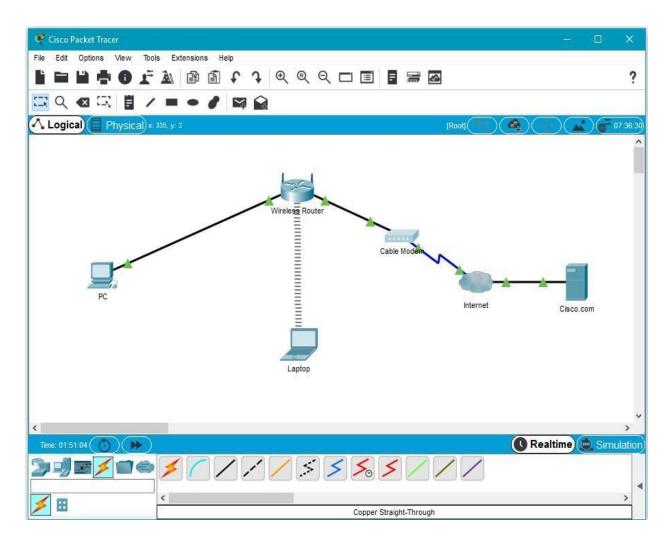

Addressing Table

Device	Interface	IP Address	Subnet Mask	Default Gateway			
PC	Ethernet0	DHCP		192.168.0.1			
Wireless Router	LAN	192.168.0.1	255.255.255.0				
Wireless Router	Internet	DHCP					

Cisco.com Server	Ethernet0	208.67.220.220	255.255.255.0	
Laptop	Wireless0	DHCP		

Objectives

Part 1: Build a Simple Network in the Logical Topology Workspace

Part 2: Configure the Network Devices

Part 3: Test Connectivity between Network Devices Part 4: Save the

File and Close Packet Tracer

Part 1: Build a Simple Network in the Logical Topology Workspace

Step 1: Launch Packet Tracer.

Step 2: Build the topology


a. Add network devices to the workspace.

Using the device selection box, add the network devices to the workspace as shown in the topology diagram.

To place a device onto the workspace, first choose a device type from the **Device-Type Selection** box. Then, click on the desired device model from the **Device-Specific Selection** box. Finally, click on a location in the workspace to put your device in that location. If you want to cancel your selection, click the **Cancel** icon for that device. Alternatively, you can click and drag a device from the **Device-Specific Selection** box onto the workspace.

b. Change display names of the network devices.

To change the display names of the network devices click on the device icon on the Packet Tracer **Logical** workspace, then click on the **Config** tab in the device configuration window. Type the new name of the device into the **Display Name** box as show in the figure below.

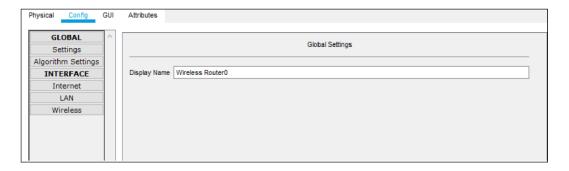

c. Add the physical cabling between devices on the workspace

Using the device selection box, add the physical cabling between devices on the workspace as shown in the topology diagram.

The PC will need a copper straight-through cable to connect to the wireless router. Select the copper straight-through cable in the device selection box and attach it to the FastEthernet0 interface of the PC and the Ethernet 1 interface of the wireless router.

The wireless router will need a copper straight-through cable to connect to the cable modem. Select the copper straight-through cable in the device-selection box and attach it to the Internet interface of the wireless router and the Port 1 interface of the cable modem.

The cable modem will need a coaxial cable to connect to the Internet cloud. Select the coaxial cable in the device-selection box and attach it to the Port 0 interface of the cable modem and the coaxial interface of the Internet cloud.

The Interne cloud will need copper straight-through cable to connect to the Cisco.com server. Select the copper straight-through cable in the device-selection box and attach it to the Ethernet interface of the Internet cloud and the FastEthernet0 interface of the Cisco.com server.

Part 2: Configure the Network Devices


Step 1: Configure the wireless router

a. Create the wireless network on the wireless router

Click on the **Wireless Router** icon on the Packet Tracer **Logical** workspace to open the device configuration window.

In the wireless router configuration window, click on the **GUI** tab to view configuration options for the wireless router.


Next, click on the **Wireless** tab in the GUI to view the wireless settings. The only setting that needs to be changed from the defaults is the **Network Name** (**SSID**). Here, type the name "HomeNetwork" as shown in the figure.

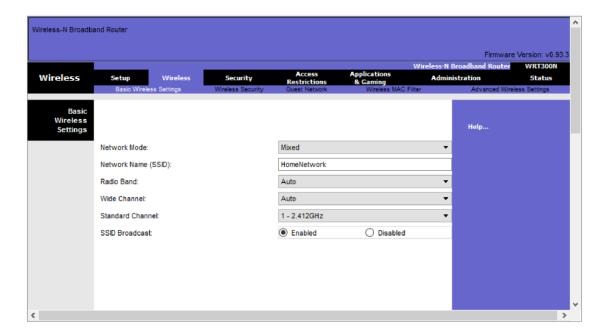

Configure the Internet connection on the wireless router Click on the **Setup** tab in the wireless router GUI.

In the **DHCP Server** settings verify that the **Enabled** button is selected and configure the static IP address of the DNS server as 208.67.220.220 as shown in the figure.

b. Click on the **Save Settings** tab.

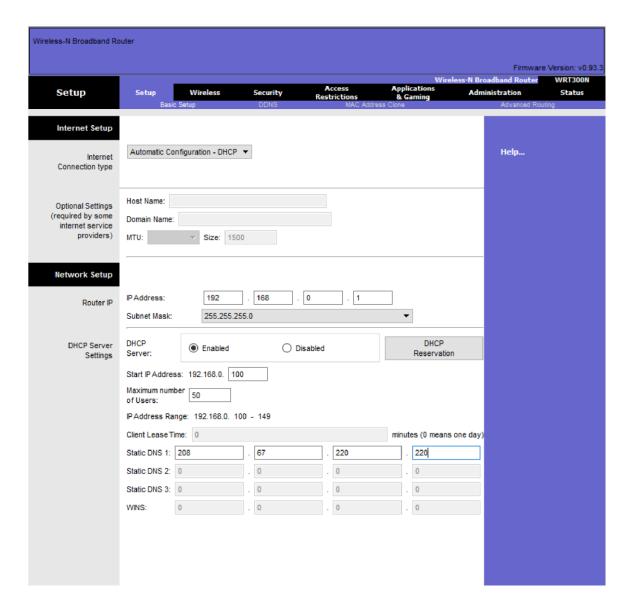

Step 2: Configure the laptop

a. Configure the Laptop to access the wireless network

Click on the Laptop icon on the Packet Tracer **Logical** workspace and in the laptop configuration windows select the **Physical** tab.

In the **Physical** tab you will need to remove the Ethernet copper module and replace it with the Wireless WPC300N module.


To do this, you first power the Laptop off by clicking the power button on the side of the laptop. Then remove the currently installed Ethernet copper module by clicking on the module on the side of the laptop and dragging it to the **MODULES** pane on the left of the laptop window. Then install the Wireless WPC300N module by clicking on it in the **MODULES** pane and dragging it to the empty module port on the side of the laptop. Power the laptop back on by clicking on the Laptop power button again.

With the wireless module installed, the next task is to connect the laptop to the wireless network.

Click on the **Desktop** tab at the top of the Laptop configuration window and select the **PC Wireless** icon.

Once the Wireless-N Notebook Adapter settings are visible, select the **Connect** tab. The wireless network "HomeNetwork" should be visible in the list of wireless networks as shown in the figure.

Select the network, and click on the **Connect** tab found below the **Site Information** pane.

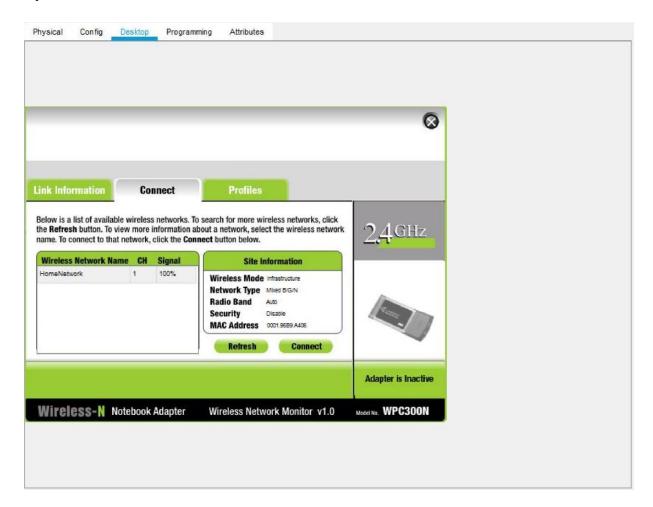


Step 3: Configure the PC


a. Configure the PC for the wired network

Click on the **PC** icon on the Packet Tracer **Logical** workspace and select the **Desktop** tab and then the **IP Configuration** icon.

In the IP Configuration window, select the **DCHP** radio button as shown in the figure so that the PC will use DCHP to receive an IPv4 address from the wireless router. Close the IP Configuration window.

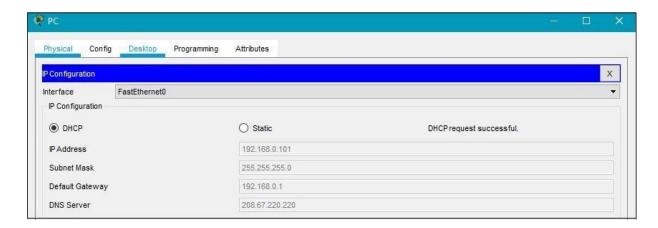


Click on the Command Prompt icon. Verify that the PC has received an IPv4 address by issuing the **ipconfig /all** command from the command prompt as shown in the figure. The PC should receive an IPv4 address in the 192.168.0.x range.

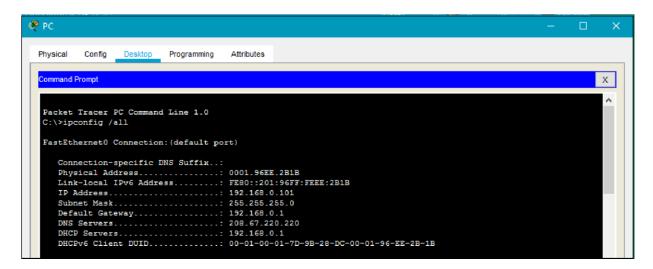


Step 4: Configure the Internet cloud

- a. Install network modules if necessary Click on the Internet Cloud icon on the Packet Tracer Logical workspace and then click on the Physical tab. The cloud device will need two modules if they are not already installed. The PT-CLOUD-NM-1CX which is for the cable modem service connection and the PT-CLOUD-NM-1CFE which is for a copper Ethernet cable connection. If these modules are missing, power off the physical cloud devices by clicking on the power button and drag each module to an empty module port on the device and then power the device back on.
- b. Identify the From and To Ports Click on the Config tab in the Cloud device window. In the left pane click on Cable under CONNECTIONS. In the first drop down box choose Coaxial and in the second drop down box choose Ethernet then click the Add button to add these as the From Port and To Port as shown in the figure.

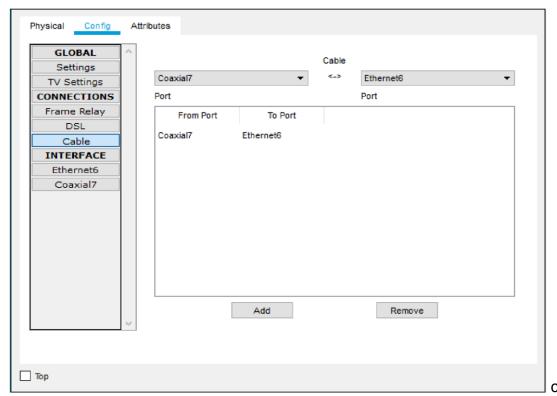

Identify the type of provider

While still in the **Config** tab click Ethernet under **INTERFACE** in the left pane. In the Ethernet configuration window select **Cable** as the Provider Network as shown in the figure.

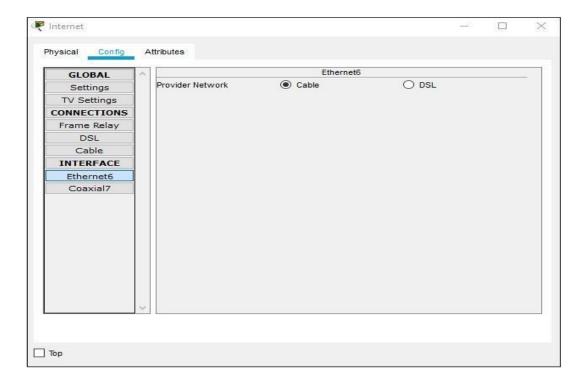

Step 5: Configure the Cisco.com server

a. Configure the Cisco.com server as a DHCP server

Click on the Cisco.com server icon on the Packet Tracer Logical workspace and select the Services tab. Select DHCP from the SERVICES list in the left pane.

In the DHCP configuration window, configure a DHCP as shown in the figure with the following settings.

Click On to turn the DCHP service on


Pool name: DHCPpool

Default Gateway: 208.67.220.220 DNS Server: 208.67.220.220

Starting IP Address: 208.67.220.1

Subnet Mask 255.255.255.0 Maximum number of Users: 50

Click Add to add the pool

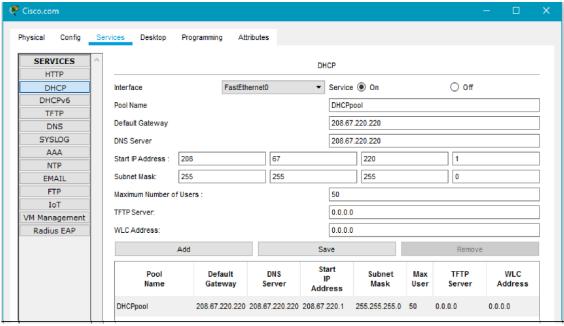

b. Configure the Cisco.com server as a DNS server to provide domain name to IPv4 address resolution.

While still in the Services tab, select DNS from the SERVICES listed in the left pane.


Configure the DNS service using the following settings as shown in the figure.

Click On to turn the DNS service on

Name: Cisco.com Type: A Record

Address: 208.67.220.220

Click Add to add the DNS service settings

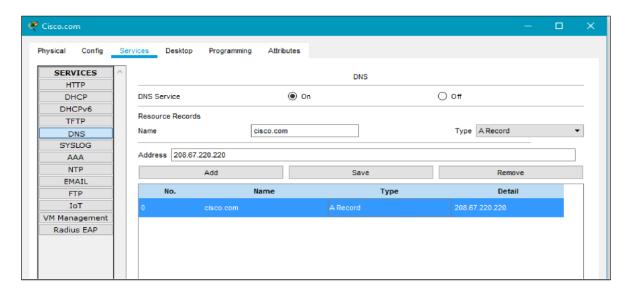

c. Configure the Cisco.com server Global settings. Select the **Config** tab.


Click on **Settings** in left pane.

Configure the Global settings of the server as follows:

Select Static

Gateway: 208.67.220.1

DNS Server: 208.67.220.220

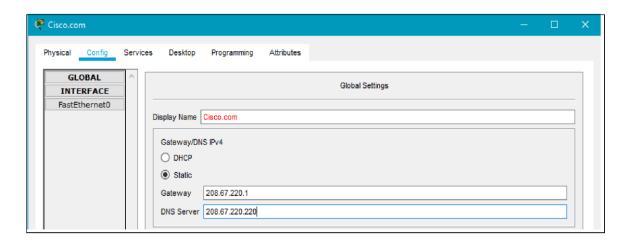


d. Configure the Cisco.com server FastEthernet0 Interface settings.

Click on **Fast Ethernet** in left pane of the **Config** tab Configure the Fast Ethernet Interface settings of the server as follows:

Select Static under IP Configuration

IP Address: 208.67.220.220

Subnet Mask: 255.255.255.0

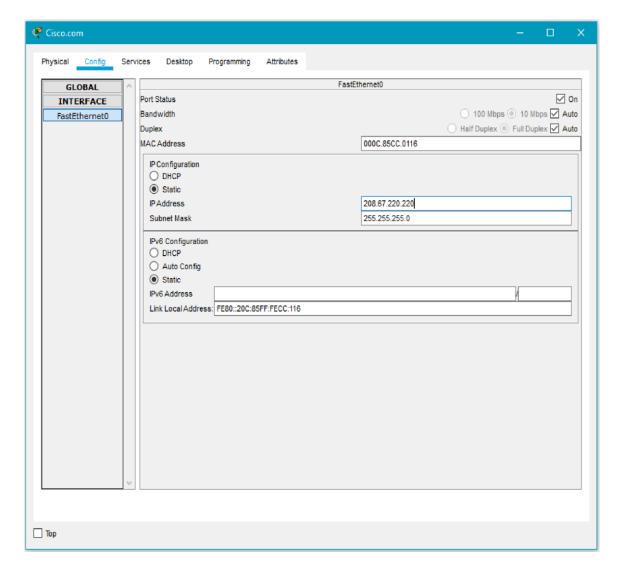

Part 3: Verify Connectivity

Step 1: Refresh the IPv4 settings on the PC

a) Verify that the PC is receiving IPv4 configuration information from DHCP.

Click on the **PC** on the Packet Tracer **Logical** workspace and then the select the **Desktop** tab of the PC configuration window.

Click on the **Command Prompt** icon

In the command prompt refresh the IP settings by issuing the commands **ipconfig** /release and then **ipconfig** /renew. The output should show that the PC has an IP address in the 192.168.0.x range, a subnet mask, a default gateway, and DNS server address as shown in the figure.

```
Command Prompt

C. \>
C.
```

b) Test connectivity to the Cisco.com server from the PC

From the command prompt, issue the command **ping Cisco.com.** It may take a few seconds for the ping to return. Four replies should be received as shown in the figure.

2024-25

87 | Page

Student observation:

- 1. Write down the key features of configuring Wireless router and DHCP server.
- 2. What is the significance of DHCP sever in internetworking.
- 3. Design and configure an inter-network in your lab using switch, router and Ethernet cables. Draw and label the design in your notebook. Also, show the ip address configuration of each and every device.

Answer:

- 1. Key Features
- Wireless Router: Set SSID, choose security (WPA2-PSK), and select a channel and configure IP address (e.g., 192.168.1.1).
- DHCP Server: Assign automatic IPs within a range (e.g., 192.168.1.100 -192.168.1.200). Set lease time.
- 2. Significance of DHCP
- Automates IP address assignment.
- Reduces configuration errors and IP conflicts.
- Makes network management easier.

Devices: Router, Switch, PCs

Design:

PC1 (192.168.1.2) <--> Switch <--> Router (192.168.1.1) <--> Internet

PC2 (192.168.1.3) <--> Switch

IP Configuration:

Router: 192.168.1.1

• PCs: 192.168.1.2, 192.168.1.3

Subnet Mask: 255.255.255.0

Result:

Thus the experiment was completed successfully.